


# Configuring SNMP on Axis cameras

## M1125 range

Once connected to the camera, click on “Setup” in the top left-hand corner.

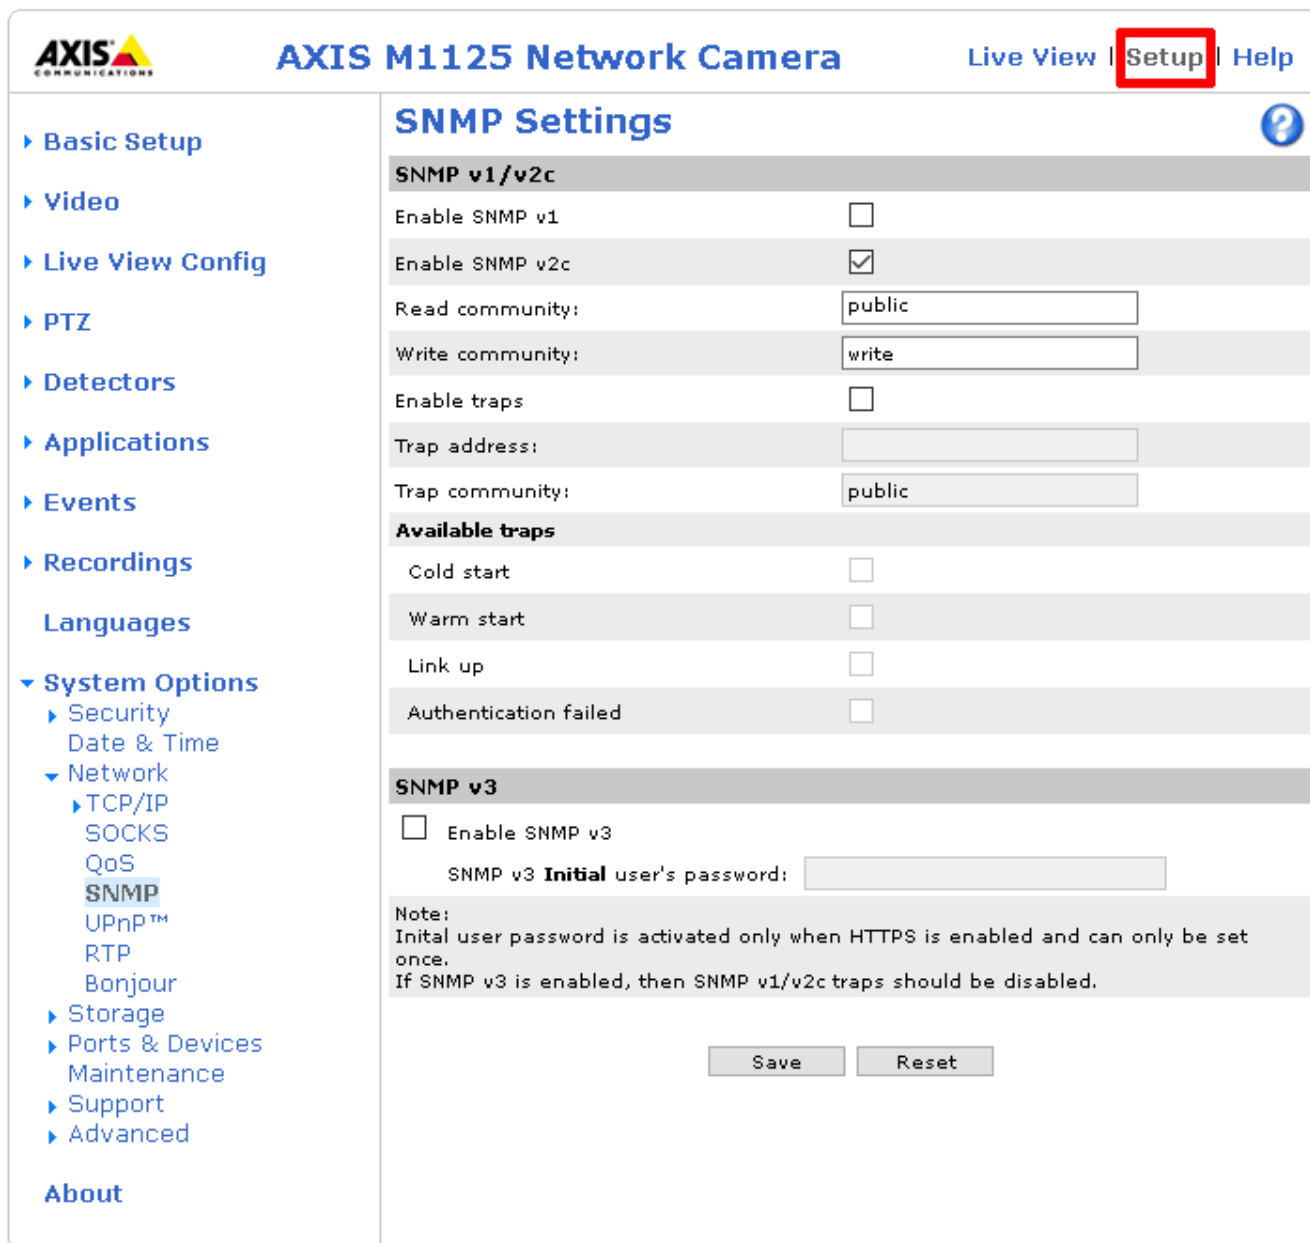

Then pull down the “System Option” menu on the left, then “Network” and click on SNMP.

**AXIS M1125 Network Camera** Live View | Setup | Help

- Basic Setup
- Video
- Live View Config
- PTZ
- Detectors
- Applications
- Events
- Recordings
- Languages
- System Options**
  - Security
  - Date & Time
  - Network
    - TCP/IP
    - SOCKS
    - QoS
    - SNMP**
    - UPnP™
    - RTP
    - Bonjour
  - Storage
  - Ports & Devices
  - Maintenance
  - Support
  - Advanced
- About

### SNMP Settings

**SNMP v1/v2c**

Enable SNMP v1	<input type="checkbox"/>
Enable SNMP v2c	<input checked="" type="checkbox"/>
Read community:	<input type="text" value="public"/>
Write community:	<input type="text" value="write"/>
Enable traps	<input type="checkbox"/>
Trap address:	<input type="text"/>
Trap community:	<input type="text" value="public"/>

**Available traps**

Cold start	<input type="checkbox"/>
Warm start	<input type="checkbox"/>
Link up	<input type="checkbox"/>
Authentication failed	<input type="checkbox"/>

**SNMP v3**

Enable SNMP v3

SNMP v3 **Initial** user's password:

Note:  
Initial user password is activated only when HTTPS is enabled and can only be set once.  
If SNMP v3 is enabled, then SNMP v1/v2c traps should be disabled.

Tick “Enable SNMP v2c” and enter the SNMP community to be read (here: public).


Click on “Save” at the bottom of the screen.

## P1364 range

Once connected to the camera, click on “Settings” at the bottom left.



Go to the "System" tab then click on "SNMP" to open the configuration menu.

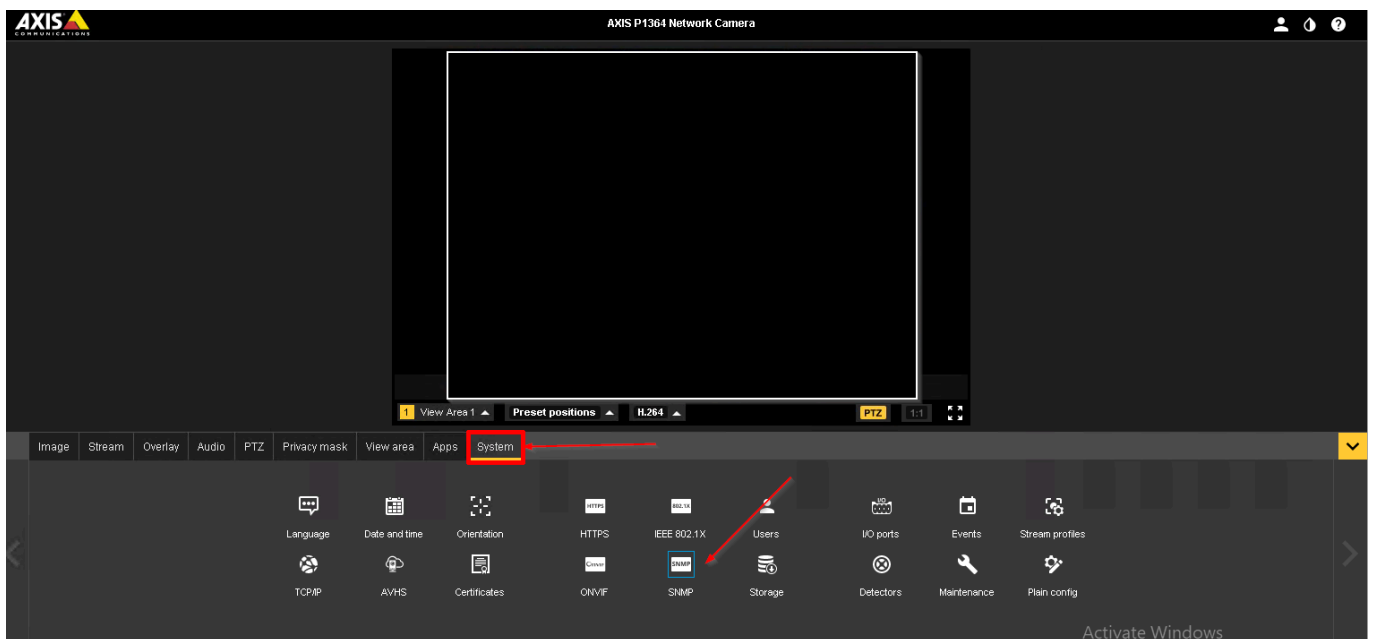

In the configuration menu, tick "Enable SNMP v2c" and enter the SNMP community to be read (here: public).

## SNMP Settings

### SNMP

#### SNMP v1/v2c

Enable SNMP v1

Enable SNMP v2c

Read community:

Write community:

Enable traps

Trap address:

Trap community:

#### Available traps

Cold start

Warm start

Link up

Authentication failed

#### SNMP v3

Enable SNMP v3

SNMP v3 **Initial** user's password:

Note:  
Initial user password is activated only when HTTPS is enabled and can only be set once.  
If SNMP v3 is enabled, then SNMP v1/v2c traps should be disabled.

Click "Save" to apply the configuration.

From:  
<https://wiki.esia-sa.com/> - **Esia Wiki**

Permanent link:  
[https://wiki.esia-sa.com/en/snmp/snmp\\_axis\\_camera](https://wiki.esia-sa.com/en/snmp/snmp_axis_camera)

Last update: **2023/11/09 18:11**

