

SNMP activation on IBM TS3XXX, TS4XXX

This tutorial has been made available to the entire Esia community thanks to the contribution of our partner DECI Développement.



Their website: <https://decidev.fr>

Once you have logged in, you will be taken to the robotics page, as shown in the image below.

Library Identity	
Serial Number	78CA793
Product ID	8379-7L
Currently Installed Library Firmware	E.20 / 3.20e
Bootcode Firmware Revision	E.80
Barcode Reader	BS625
IPv4 Address	192.168.1.100
MAC Address	00E118701B
Library Mode	Random
Wide Node Name	R000000E118701B

Click on 'Configure Library', 'SNMP', and you will arrive on the SNMP configuration page. As shown below:

SNMP

Enabled

Community Name: monitoring

SNMP DESTINATIONS

Target 1 - IP Address: 0.0.0.0 Version: SNMPv2

Target 2 - IP Address: 0.0.0.0 Version: SNMPv1

Target 3 - IP Address: 0.0.0.0 Version: SNMPv1

Audit Logging:

SNMP V3 SECURITY

User Name: initial

Authentication: none

Authentication Password:

Privacy: none

Privacy Password:

Refresh Submit

Check the "Enabled" box, indicate the SNMP community, the IP address of your Esia server in the "Target 1 - IP Address" field and choose the "SNMPv2" version in the "version" field. Then click on 'Submit', a pop-up like the one below will ask you for confirmation, click on OK.



SNMP is now activated on your robotics.

From:

<https://wiki.esia-sa.com/> - **Esia Wiki**

Permanent link:

https://wiki.esia-sa.com/en/snmp/snmp_ibm_ts

Last update: **2025/03/06 14:11**

