


SNMP activation on an Ubiquiti access point

Once logged in as administrator, you will be taken to the dashboard as shown in the image below.

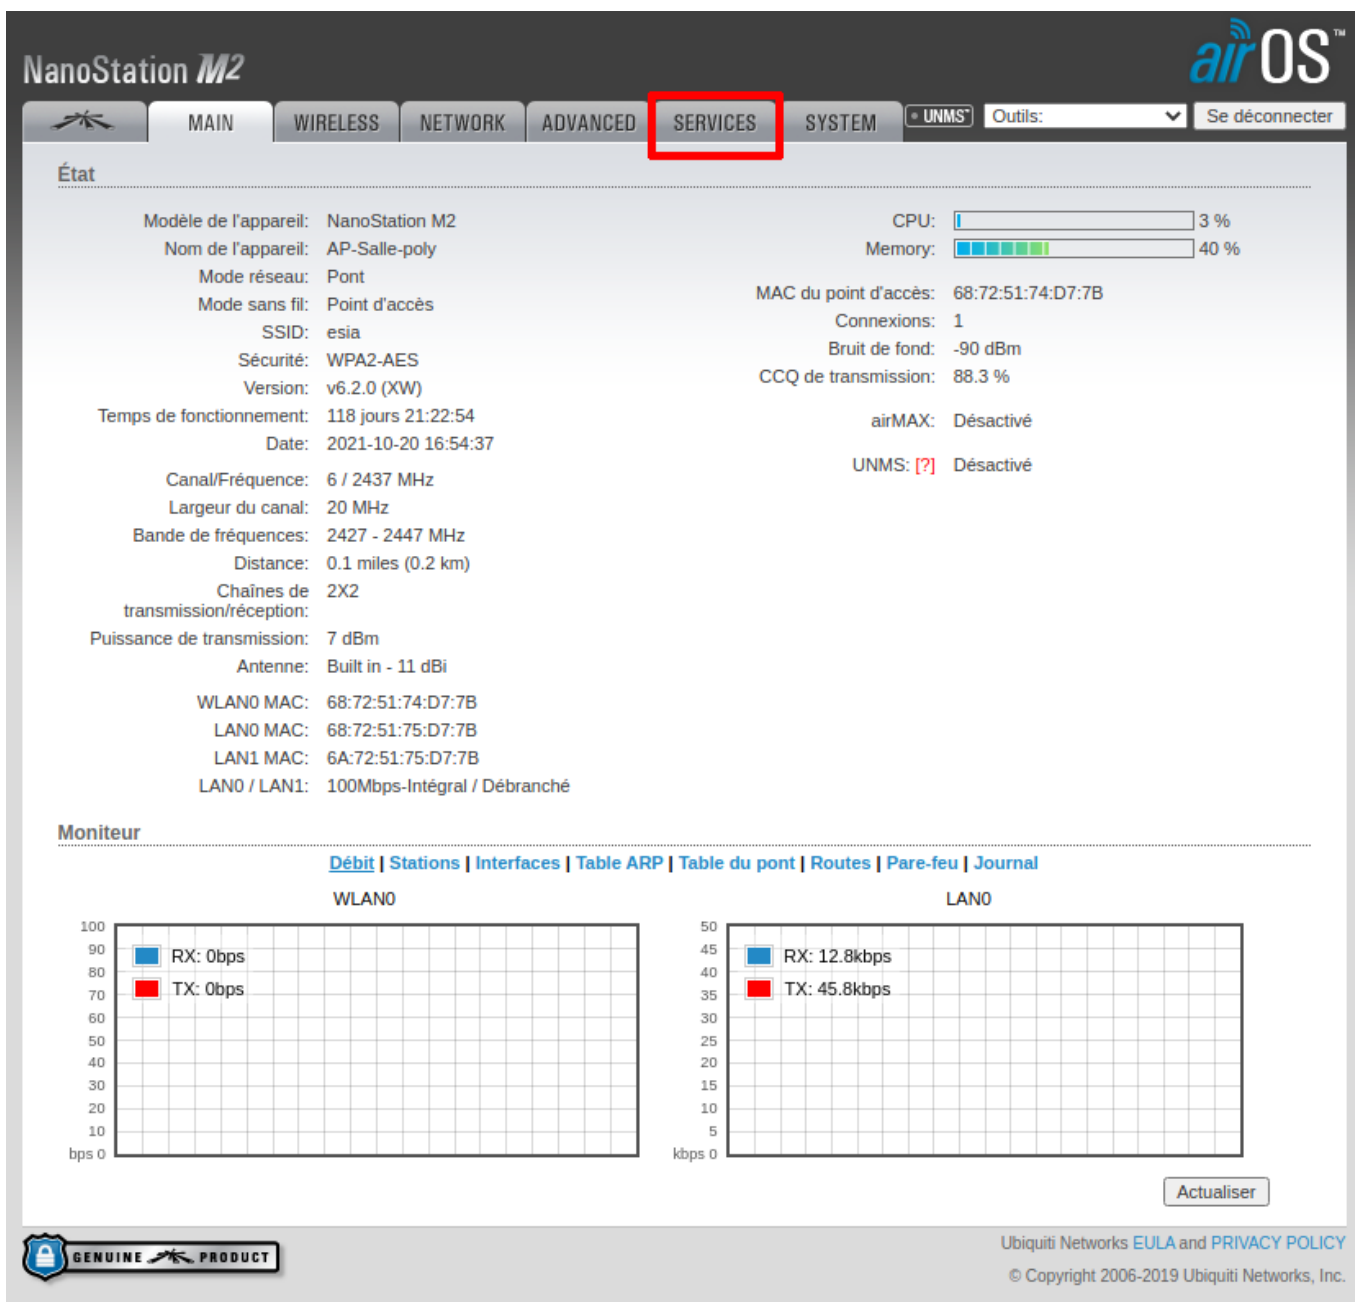

Click on "Services" and the following configuration page appears. There is a section dedicated to SNMP on the right (see box).

Ubiquiti Network Management System

UNMS: Activer
Url: -
Clé:

Chien de garde de ping

Chien de garde de ping: Activer
Adresse IP à pinguer:
Intervalle de ping: secondes
Retard de démarrage: secondes
Echec du compte à rebours pour le redémarrage.:
Enregistrer les informations d'assistance:

Agent SNMP

Agent SNMP: Activer
Communauté SNMP:
Contacter:
Emplacement:

Serveur web

Serveur web: Activer
Connexion sécurisée (HTTPS): Activer
Port du serveur sécurisé:
Port du serveur:
Délai de session: minutes

Serveur SSH

Serveur SSH: Activer
Port du serveur:
Authentification par mot de passe: Activer
Clés autorisées:

Client NTP

Client NTP: Activer
Serveur NTP:

Journal système

Journal système: Activer
Connexion à distance: Activer
Adresse IP de connexion distante:
Port de connexion distant:
Protocole TCP: Activer

Découverte d'appareils

Découverte: Activer
CDP: Activer

GENUINE PRODUCT © Copyright 2006-2019 Ubiquiti Networks, Inc.

Check the “SNMP agent enabled” box and then enter the SNMP community in the text field.

Finally, click on change at the bottom right of the page.

You can now apply the “default_snmp_ap_ubiquiti” pattern, which will allow you to monitor

- PING
- CPU
- RAM
- Number of clients connected

From:

<https://wiki.esia-sa.com/> - **Esia Wiki**

Permanent link:

https://wiki.esia-sa.com/en/snmp/snmp_ubiquiti

Last update: **2023/11/09 18:10**

