


SNMP activation on an Ubiquiti switch

Once logged in as administrator on the Unifi management console,

1. select the site
2. Click on the gear to access the “System Settings” menu
3. Go to the “System” menu
4. Click on the “Integrations” tab
5. Activate SNMP v1/2C by ticking the box
6. Define the Community String

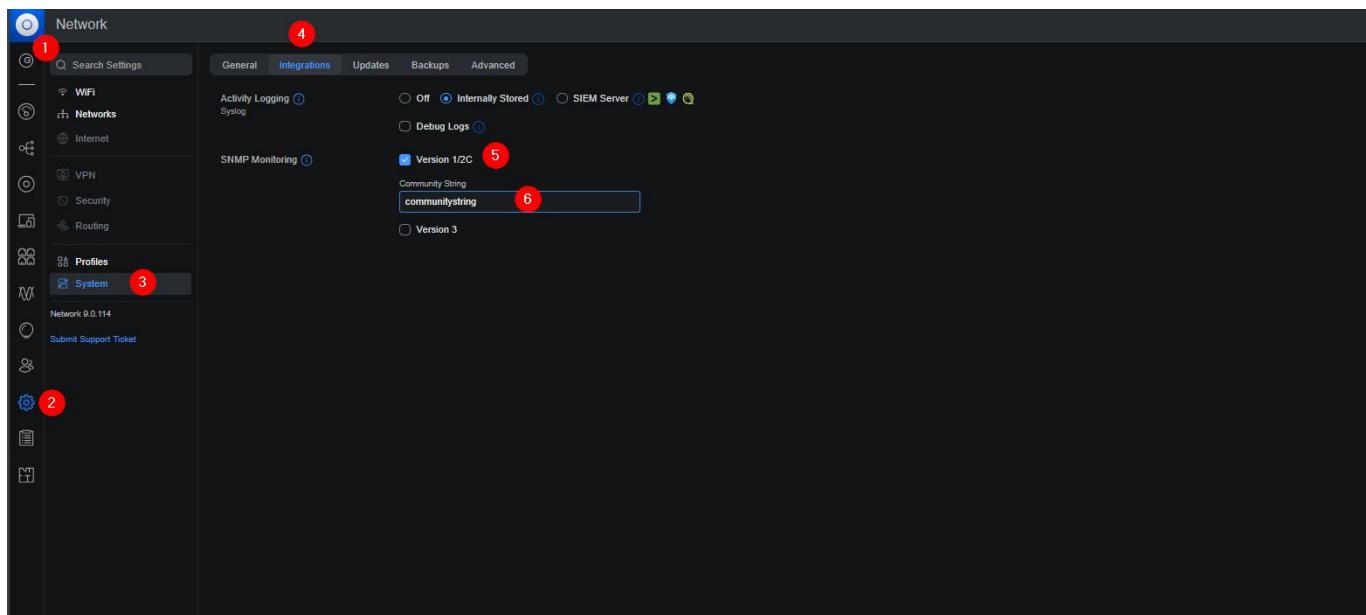

You can now apply the “default_snmp_ubiquiti_switch” pattern, which will allow you to supervise

- PING
- CPU
- RAM
- Environment
- Bandwidth, etc

From:

<https://wiki.esia-sa.com/> - Esia Wiki

Permanent link:

https://wiki.esia-sa.com/en/snmp/snmp_ubiquiti_switch

Last update: **2025/05/12 12:49**

