SNMP activation on a Raritan

Activate SNMP

Open your browser and in the address bar enter the IP address of your PDU and press**enter**". Once connected, you should see this:

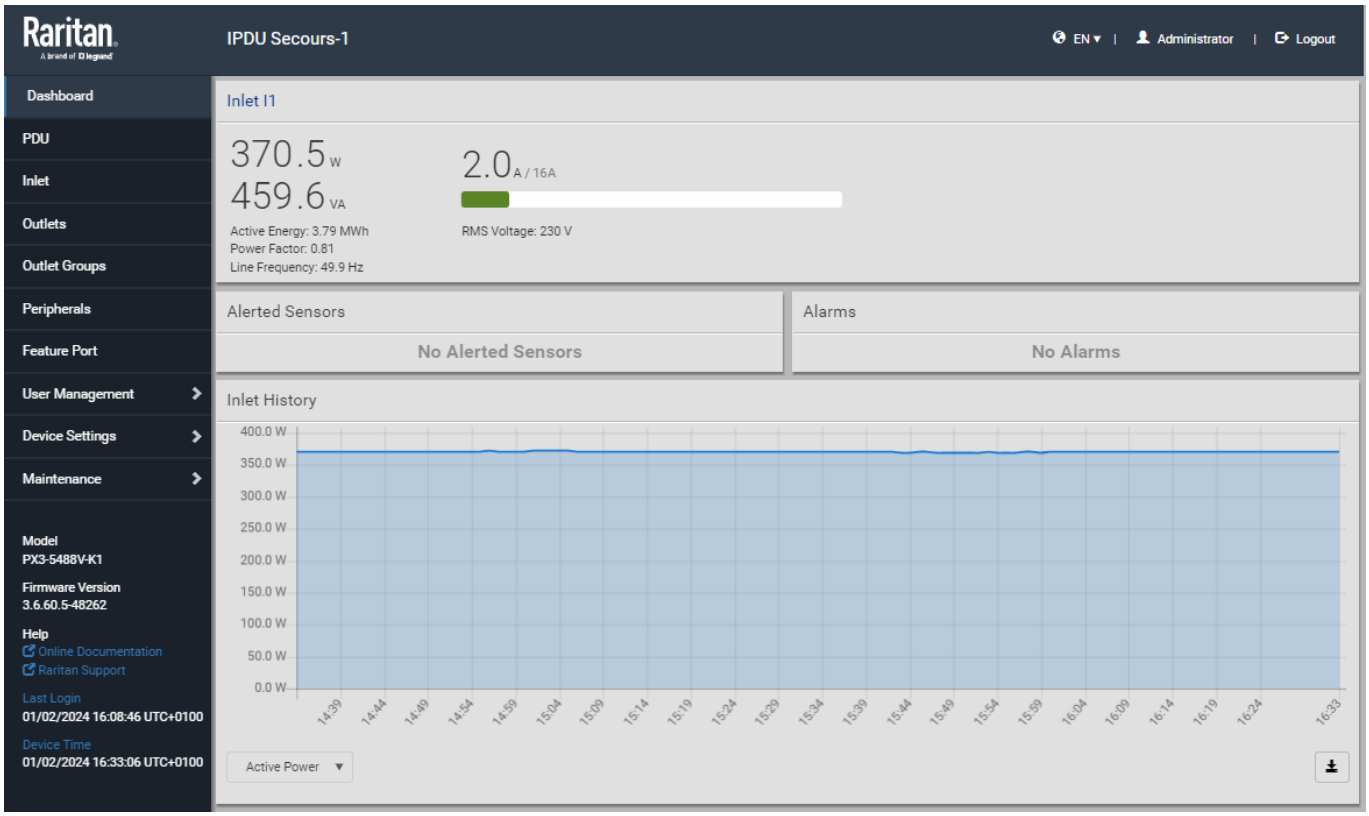

Then click on**Device Settings**"in the main menu and then on**Network Services**"and then on**SNMP**"The configuration window will appear.

In the SNMP Agent tab, tick the box marked "**Enable SNMP v1 / v2c**"and, if you wish, change the SNMP community (Read community string). Click on the**Save**"to confirm the changes:

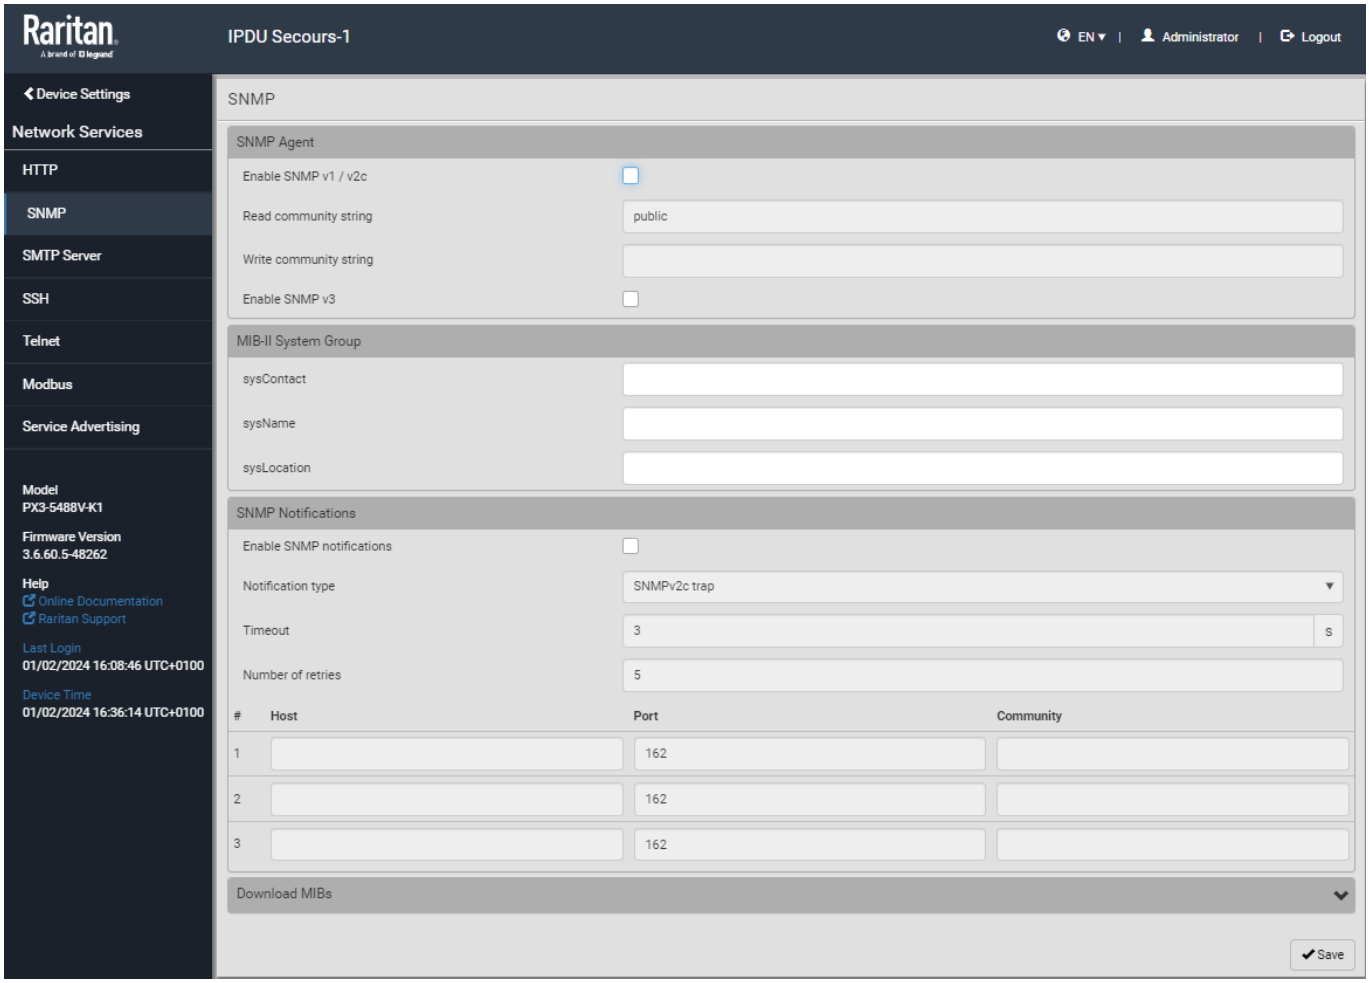

Serial connection of PDUs

To connect the PDUs in series via a USB cable to avoid having to connect a network cable to each PDU, click on “Device Settings”.**Device Settings**“in the main menu and then**Network** “The configuration window appears.

In the**Common Network Settings**“tab, choose Master for the**Port forwarding role**“and choose USB for the**Downstream interface**” :

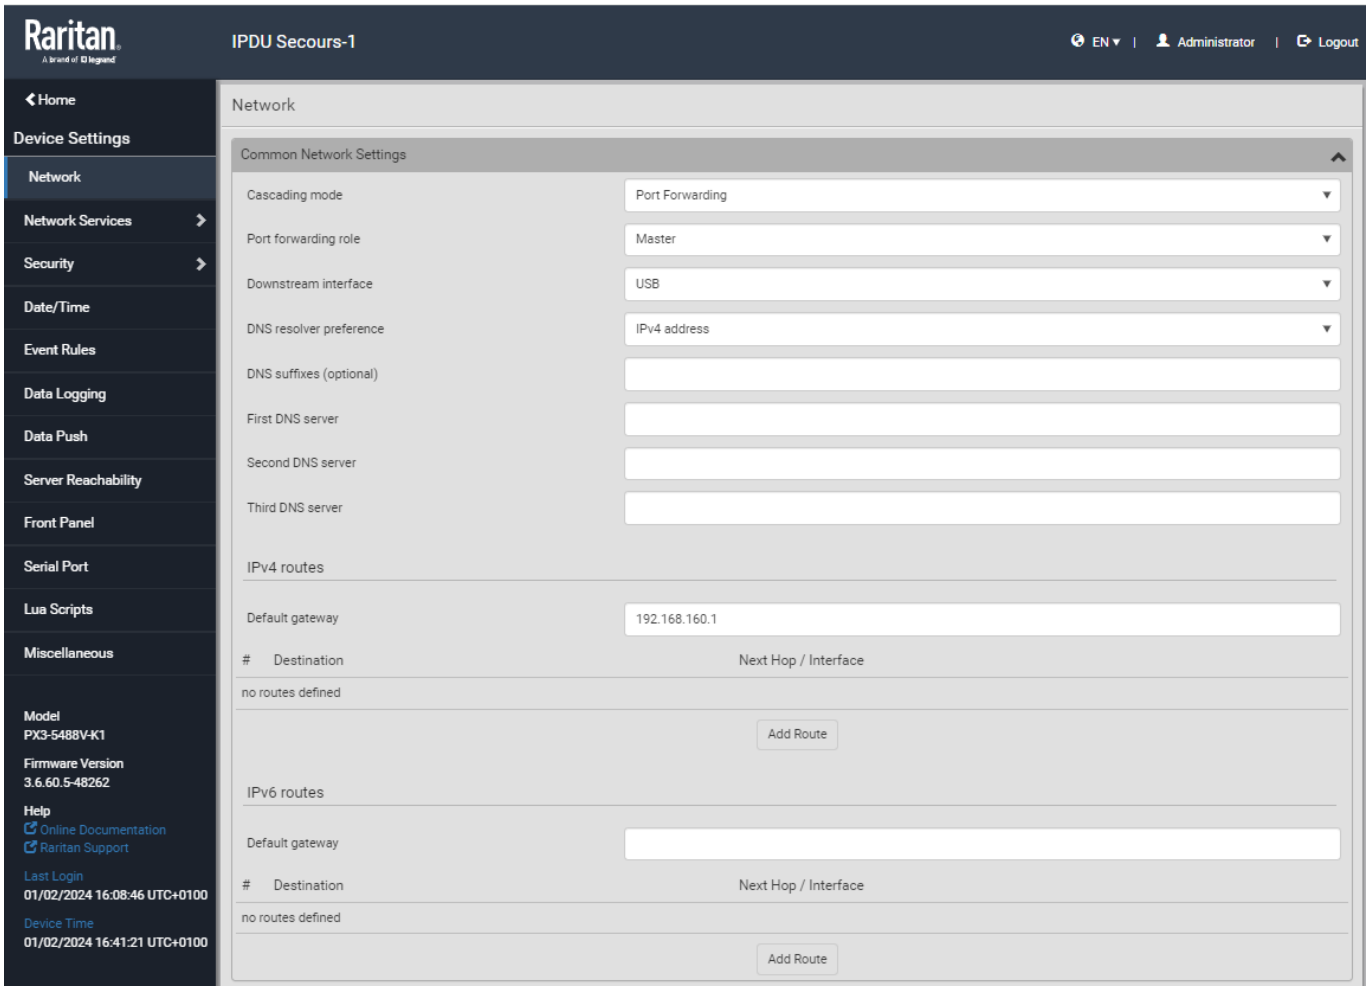

Repeat the same operation for the second PDUs and select Slave for the “Port forwarding role” option.**Port forwarding role**“in this case:

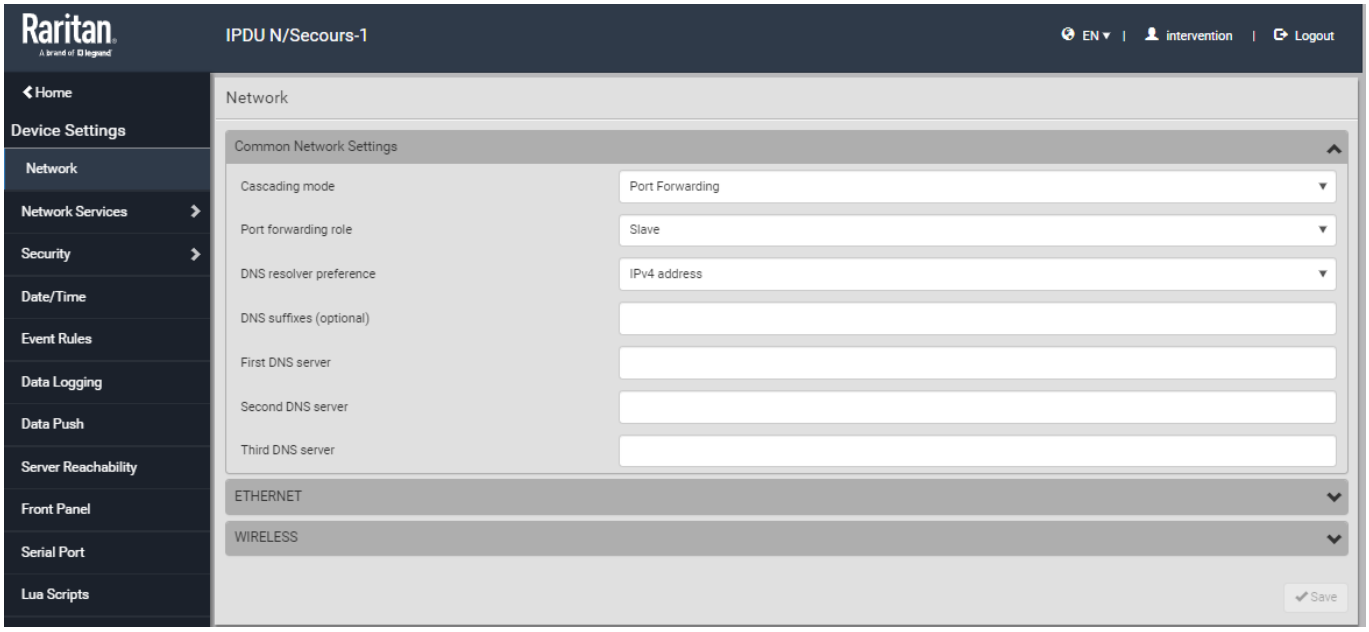

From:
https://wiki.esia-sa.com/ - **Esia Wiki**

Permanent link:
https://wiki.esia-sa.com/en/snmp/snmp_raritan

Last update: **2025/05/12 12:48**